










































 




















 
























 














| Original     | Replacement   | Original   | Replacement   |
|--------------|---|------------|---|
| On/Off       |  Power                 | Return TV  |  TV/Radio /              |
| Mute         |  Mute / Dimmer         | Menu video |  D.Menu / Top            |
| Update       |  Play / Slow           | Output     |  Setup / OPT /           |
| Still        |  Pause / Step / Freeze | Text       |  Text / Goto             |
| Txt Stop     |  Stop / Hold           | Input      |  AV / Input / RDS        |
| Reveal       |  Rec / Rec Mode        | Menu       |  Menu / Home             |
| Tone-        |  << / Tune-            | Menu Up    |  Up                      |
| Tone+        |  >> / Tune+            | Info       |  Info / Angle            |
| Camera1      |  I<< / Preset-         | Menu Left  |  Left                    |
| AV 2         |  >>I / Preset+        | OK Enter   |  OK                     |
| Color- S.Std |  Sound / Title       | Menu Right |  Right                 |
| Menu audio   |  Audio / Lang I/II   | Menu Off   |  Exit / Cancel / Clear |
| Subt.List    |  Subtitle / EQ       | Menu Down  |  Down                  |
| Surround     |  Eject / Surround    | Swap       |  Back / Return         |
| Color+ P.Std |  Picture / Format    | Volume+    |  Vol+                  |
| Txt Expand   |  Zoom / Size         | On/Tim     |  Smart / List          |
| Sleep Timer  |  Sleep / Timer       | Chan.Up    |  CH+ / Page+           |
























| Original      | Replacement  | Original    | Replacement   |
|---------------|--|-------------|---|
| Volume-       |  Vol-                     | Yellow      |  Yellow / YouTube / Repeat       |
| Display       |  Display / Media          | Blue        |  Blue / Prime Video / Random     |
| Chan.Down     |  CH- / Page-              | Game Coo    |  Shift + << /                    |
| 1             |  1                        | Nicam/Mono  |  Shift + Audio / Lang I/II       |
| 2             |  2                        | 4.# 16:9    |  Shift + Picture / Format        |
| 3             |  3                        | Bright- Sys |  Shift + Setup / OPT / Tools     |
| 4             |  4                        | Mix Scan    |  Shift + Text /                  |
| 5             |  5                        | TV/AV       |  Shift + AV / Input / RDS        |
| 6             |  6                        | Camera      |  Shift + Info / Angle            |
| 7             |  7                       | Dim Pip     |  Shift + Left                   |
| 8             |  8                      | On Pip      |  Shift + OK                    |
| 9             |  9                      | Rotate Pip  |  Shift + Right                 |
| Guide -/-- 1. |  Guide / EPG / -/--     | Clear       |  Shift + Exit / Cancel / Clear |
| 0/10          |  0                      | Back        |  Shift + Back / Return         |
| 2.Fav P/C 2.  |  Fav / Marker / PC      | Audio+      |  Shift + Vol+                  |
| Red           |  Red / Netflix / Search | Off/Tim     |  Shift + Smart / List          |
| Green         |  Green / APP / Repeat   | Disp        |  Shift + Display / Media       |





| Original     | Replacement   | Original   | Replacement   |
|--------------|---|------------|---|
| On/Off       |  Power                 | TV/AV      |  AV / Input / RDS      |
| Mute         |  Mute / Dimmer         | Menu       |  Menu / Home           |
| Update       |  Play / Slow           | Menu Up    |  Up                    |
| Reveal       |  Pause / Step / Freeze | Info       |  Info / Angle          |
| Txt Stop     |  Stop / Hold           | Menu Left  |  Left                  |
| Contrast-    |  I<< / Preset-         | OK Enter   |  OK                    |
| Contrast+    |  >>I / Preset+         | Menu Right |  Right                 |
| Color- S.Std |  Sound / Title         | Menu Off   |  Exit / Cancel / Clear |
| Menu audio   |  Audio / Lang I/II     | Menu Down  |  Down                  |
| Subt.List    |  Subtitle / EQ         | Back       |  Back / Return         |
| Color+ P.Std |  Picture / Format     | Volume+    |  Vol+                 |
| Txt Expand   |  Zoom / Size         | Disp       |  Smart / List        |
| Sleep Timer  |  Sleep / Timer       | Chan.Up    |  CH+ / Page+         |
| Return TV    |  TV/Radio /          | Volume-    |  Vol-                |
| Menu video   |  D.Menu / Top        | Display    |  Display / Media     |
| Bright- Sys  |  Setup / OPT /       | Chan.Down  |  CH- / Page-         |
| Text         |  Text / Goto         | 1          |  1                   |



| Original      | Replacement   | Original   | Replacement   |
|---------------|---|------------|---|
| 2             |  2   | Store Text |  +  Shift + Fav / Marker / PC |
| 3             |  3   |            |   |
| 4             |  4   |            |   |
| 5             |  5   |            |   |
| 6             |  6   |            |   |
| 7             |  7   |            |   |
| 8             |  8   |            |   |
| 9             |  9   |            |   |
| Guide -/-- 1. |  Guide / EPG / -/--  |            |   |
| 0/10          |  0   |            |   |
| 2.Fav P/C 2.  |  Fav / Marker / PC   |            |   |
| Red           |  Red / Netflix / Search  |            |   |
| Green         |  Green / APP / Repeat  |            |   |
| Yellow        |  Yellow / YouTube / Repeat   |            |   |
| Blue          |  Blue / Prime Video / Random   |            |   |
| Bright+ Mode  |  +  Shift + Setup / OPT / Tools |            |   |
| Mix Scan      |  +  Shift + Text / Goto         |            |   |

Goto

