





































Original	Replacement
	 Power
	 Source
	 TV/Radio
	 Mute / Dimmer
	 PR List
	 Fav / Marker / PC
	 Audio / Lang I/II
	 Info / Angle
	 EPG
	 Subtitle / EQ
	 Teletext
	 Guide
	 Music
	 S.Show
	 Zoom
	 Repeat
	 << / Tune-

Original	Replacement
	 >> / Tune+
	 I<< / Preset-
	 >>I / Preset+
	 Play / Pause
	 Play / Pause
	 Up
	 Stop / Exit
	 Stop / Exit
	 Left
	 Enter
	 Right
	 Vol+
	 Down
	 CH+ / Page+
	 Vol-
	 P.Adj
	 Menu / Home





	Original	Replacement	
	CH-	CH- / Page-	
	1	1	
	2	2	
	3	3	
	Lang	+ AUDIO Shift + Audio / Lang I/II	
	4	4	
	5	5	
	6	6	
	Sleep	Sleep / Timer	
	7	7	
	8	8	
	9	9	
	Auto	D.Menu / Top	
	0	0	
	10+ / -/--	Guide / EPG / -/--	
	Recall	Back / Return	
	Setup / Game	Setup / OPT /	

Original	Replacement

