



Original		Replacement		Original		Replacement	
	Power		Power		9		9
	Sleep		Sleep / Timer		EPG		Guide / EPG / -/-
	Screen		Picture / Format		0		0
	Presets		Setup / OPT /		Swap		Fav / Marker / PC
	↔		TV/Radio /		Photo/Music/Movi		D.Menu / Top
	FAV		Shift + Fav / Marker / PC		World		Smart / List
	Lang		Audio / Lang I/II		Source		AV / Input / RDS
	Subtitle		Subtitle / EQ		Menu		Menu / Home
	TXT		Text / Goto		Up		Up
	1		1		Left		Left
	2		2		OK		OK
	3		3		Right		Right
	4		4		Down		Down
	5		5		C		Exit / Cancel / Clear
	6		6		Disp.		Display / Media
	7		7		Search Mode		Shift + Red / Netflix /
	8		8		Return		Back / Return





	Original	Replacement		Original	Replacement
	CH+	CH PAGE	CH+ / Page+		Yellow/Root
	Info	ANGLE INFO	Info / Angle		Blue/Title
	Vol+	VOL +	Vol+		
	CH-	CH PAGE -	CH- / Page-		
	Mute	DIMMER MUTE	Mute / Dimmer		
	Vol-	VOL -	Vol-		
	Rec	REC MODE	Rec / Rec Mode		
	Pause	STEP-FREEZE	Pause / Step / Freeze		
	I<<	PRESET-	I<< / Preset-		
	>>I	PRESET+	>>I / Preset+		
	<<	TUNE-	<< / Tune-		
	Play	SLOW	Play / Slow		
	Stop	HOLD	Stop / Hold		
	>>	TUNE+	>> / Tune+		
	Red/↑/Zoom	NETFLIX SEARCH	Red / Netflix / Search		
	Red/↑/Zoom	SIZE ZOOM	Zoom / Size		
	Green/↓/Repeat	APP REPEAT	Green / APP / Repeat		

	Original	Replacement
	Yellow/Root	YouTube REPEAT A-B
	Blue/Title	Prime Video RANDOM

