



| Original | | Replacement | | Original | | Replacement | |
|---|----------|---|---------------------------|---|------------------|---|-------------------------|
|  | Power |  | Power |  | 9 |  | 9 |
|  | Sleep |  | Sleep / Timer |  | EPG |  | Guide / EPG / -/- |
|  | Screen |  | Picture / Format |  | 0 |  | 0 |
|  | Presets |  | Setup / OPT / |  | Swap |  | Fav / Marker / PC |
|  | ↔ |  | TV/Radio / |  | Photo/Music/Movi |  | D.Menu / Top |
|  | FAV |  | Shift + Fav / Marker / PC |  | World |  | Smart / List |
|  | Lang |  | Audio / Lang I/II |  | Source |  | AV / Input / RDS |
|  | Subtitle |  | Subtitle / EQ |  | Menu |  | Menu / Home |
|  | TXT |  | Text / Goto |  | Up |  | Up |
|  | 1 |  | 1 |  | Left |  | Left |
|  | 2 |  | 2 |  | OK |  | OK |
|  | 3 |  | 3 |  | Right |  | Right |
|  | 4 |  | 4 |  | Down |  | Down |
|  | 5 |  | 5 |  | C |  | Exit / Cancel / Clear |
|  | 6 |  | 6 |  | Disp. |  | Display / Media |
|  | 7 |  | 7 |  | Search Mode |  | Shift + Red / Netflix / |
|  | 8 |  | 8 |  | Return |  | Back / Return |





| Original | Replacement | Original | Replacement |
|---|----------------|---|-----------------------------|
|  | CH+ |  | Yellow/Root |
|  | Info |  | Blue/Title |
|  | Vol+ | | |
|  | CH- | | |
|  | Mute | | |
|  | Vol- | | |
|  | Rec | | |
|  | Pause | | |
|  | I<< | | |
|  | >>I | | |
|  | << | | |
|  | Play | | |
|  | Stop | | |
|  | >> | | |
|  | Red/↑/Zoom | | |
|  | Red/↑/Zoom | | |
|  | Green/↓/Repeat | | |
| | |  | CH+ / Page+ |
| | |  | Info / Angle |
| | |  | Vol+ |
| | |  | CH- / Page- |
| | |  | Mute / Dimmer |
| | |  | Vol- |
| | |  | Rec / Rec Mode |
| | |  | Pause / Step / Freeze |
| | |  | I<< / Preset- |
| | |  | >>I / Preset+ |
| | |  | << / Tune- |
| | |  | Play / Slow |
| | |  | Stop / Hold |
| | |  | >> / Tune+ |
| | |  | Red / Netflix / Search |
| | |  | Zoom / Size |
| | |  | Green / APP / Repeat |
| | |  | Yellow / YouTube / Repeat |
| | |  | Blue / Prime Video / Random |

