









 

 

 
 
 
 

 
 
 
 
 
 


 
 



 
 



 
 
 
 


 
 
 
 
 
 
 
 



 







 
 








Original	Replacement	Original	Replacement
 Power	 Power	 Vol -	 Vol -
 Mute	 Mute	 CH +	 Ch +
 1	 1	 CH -	 Ch -
 2	 2	 Exit	 Exit
 3	 3	 Red / USB Left	 Red
 4	 4	 Red / USB Left	 Shift + Left
 5	 5	 Green / USB	 Green
 6	 6	 Green / USB	 Shift + Down
 7	 7	 Yellow / USB Up	 Yellow
 8	 8	 Yellow / USB Up	 Shift + Up
 9	 9	 Blue / USB Right	 Blue
 0	 0	 Blue / USB Right	 Shift + Right
 10+	 Shift + Guide	 Up	 Up
 SUBTL	 Subt	 Left	 Left
 EPG	 Guide	 Enter	 Ok
 Menu	 Menu	 Right	 Right
 Vol +	 Vol +	 Down	 Down

Original	Replacement	Original	Replacement
 Vol -	 Vol -	 Vol -	 Vol -
 CH +	 Ch +	 CH +	 Ch +
 CH -	 Ch -	 CH -	 Ch -
 Exit	 Exit	 Exit	 Exit
 Red / USB Left	 Red	 Red / USB Left	 Red
 Red / USB Left	 Shift + Left	 Red / USB Left	 Shift + Left
 Green / USB	 Green	 Green / USB	 Green
 Green / USB	 Shift + Down	 Green / USB	 Shift + Down
 Yellow / USB Up	 Yellow	 Yellow / USB Up	 Yellow
 Yellow / USB Up	 Shift + Up	 Yellow / USB Up	 Shift + Up
 Blue / USB Right	 Blue	 Blue / USB Right	 Blue
 Blue / USB Right	 Shift + Right	 Blue / USB Right	 Shift + Right
 Up	 Up	 Up	 Up
 Left	 Left	 Left	 Left
 Enter	 Ok	 Enter	 Ok
 Right	 Right	 Right	 Right
 Down	 Down	 Down	 Down


 


 
 

 
 

 
 




 
 
 


 

 
 

 





 





	Original	Replacement		Original	Replacement
	QV	 Options		Size	 Format
	FAV	 Pre Ch		Prog / Mix	 Smart
	Source	 AV		Prog / Mix	 +  Shift + Sleep
	Sleep	 Sleep		Return / SUBPG	 Back
	Picture	 +  Shift + Format		Repeat / Reveal	 +  Shift + Back
	Sound	 +  Shift + Dual		Search / Hold	 TV/R
	Display	 Info			
	I/II / Top	 Dual			
	FAV - / REV	 <<			
	FAV + / FWD	 >>			
	USR/CR / Text	 Media			
	USR/CR / Text	 Text			
	Play/Pause / Index	 Play			
	Play/Pause / Index	 +  Shift + Info			
	Play/Pause / Index	 Pause			
	Stop / Cancel	 Stop			
	Stop / Cancel	 +  Shift + Exit			





Original	Replacement	Original	Replacement
	 Power		 9
	 AV		 0
	 Exit		 Guide
	 Menu		 Up
	 Dual		 Right
	 Media		 Ok
	 Options		 Left
	 Text		 Down
	 TV/R		 Subt
	 1		 Pause
	 2		 Rec
	 3		 <<
	 6		 Play
	 5		 >>
	 4		 Shift + Media
	 7		 Shift + Dual
	 8		 Shift + 6

