









 

 

 
 
 
 

 
 
 
 
 
 


 
 



 
 



 
 
 
 


 
 
 
 
 
 
 
 



 







 
 







 



Original	Replacement	Original	Replacement
 Power	 Power	 Vol -	 Vol -
 Mute	 Mute	 CH +	 Ch +
 1	 1	 CH -	 Ch -
 2	 2	 Exit	 Exit
 3	 3	 Red / USB Left	 Red
 4	 4	 Red / USB Left	 Shift + Left
 5	 5	 Green / USB	 Green
 6	 6	 Green / USB	 Shift + Down
 7	 7	 Yellow / USB Up	 Yellow
 8	 8	 Yellow / USB Up	 Shift + Up
 9	 9	 Blue / USB Right	 Blue
 0	 0	 Blue / USB Right	 Shift + Right
 10+	 Shift + Guide	 Up	 Up
 SUBTL	 Subt	 Left	 Left
 EPG	 Guide	 Enter	 Ok
 Menu	 Menu	 Right	 Right
 Vol +	 Vol +	 Down	 Down

Original	Replacement	Original	Replacement
 Vol -	 Vol -	 Vol -	 Vol -
 CH +	 Ch +	 CH +	 Ch +
 CH -	 Ch -	 CH -	 Ch -
 Exit	 Exit	 Exit	 Exit
 Red / USB Left	 Red	 Red / USB Left	 Red
 Red / USB Left	 Shift + Left	 Red / USB Left	 Shift + Left
 Green / USB	 Green	 Green / USB	 Green
 Green / USB	 Shift + Down	 Green / USB	 Shift + Down
 Yellow / USB Up	 Yellow	 Yellow / USB Up	 Yellow
 Yellow / USB Up	 Shift + Up	 Yellow / USB Up	 Shift + Up
 Blue / USB Right	 Blue	 Blue / USB Right	 Blue
 Blue / USB Right	 Shift + Right	 Blue / USB Right	 Shift + Right
 Up	 Up	 Up	 Up
 Left	 Left	 Left	 Left
 Enter	 Ok	 Enter	 Ok
 Right	 Right	 Right	 Right
 Down	 Down	 Down	 Down




 


 
 

 
 

 
 




 
 
 


 

 
 

 





 



Original	Replacement	Original	Replacement
 QV	 Options	 Size	 Format
 FAV	 Pre Ch	 Prog / Mix	 Smart
 Source	 AV	 Prog / Mix	 Shift + Sleep
 Sleep	 Sleep	 Return / SUBPG	 Back
 Picture	 Shift + Format	 Repeat / Reveal	 Shift + Back
 Sound	 Shift + Dual	 Search / Hold	 TV/R
 Display	 Info		
 I/II / Top	 Dual		
 FAV - / REV	 <<		
 FAV + / FWD	 >>		
 USR/CR / Text	 Media		
 USR/CR / Text	 Text		
 Play/Pause / Index	 Play		
 Play/Pause / Index	 Shift + Info		
 Play/Pause / Index	 Pause		
 Stop / Cancel	 Stop		
 Stop / Cancel	 Shift + Exit		







Original	Replacement	Original	Replacement
	 Power		 9
	 AV		 0
	 Exit		 Guide
	 Menu		 Up
	 Dual		 Right
	 Media		 Ok
	 Options		 Left
	 Text		 Down
	 TV/R		 Subt
	 1		 Pause
	 2		 Rec
	 3		 <<
	 6		 Play
	 5		 >>
	 4		 Shift + Media
	 7		 Shift + Dual
	 8		 Shift + 6

