 

 
 
 

 

 

 




 
 
 
 
 
 
 
 
 
 

 
 
 
 



 
 

 
 


 

 

 
 


 



 

 
 
 
 
 
 
 

 

 
 
 





Original		Replacement		Original		Replacement	
	Power		Power		Source		SRC
	Display		VOD		PIP		WIDE
	Mute		MUTE		TV		TV/R
	Video		MEDIA		PC		Shift + TV/R
	Scart		Shift + MEDIA		Sound		Audio
	1		1		Sleep		Shift + Power
	2		2		Swap		BACK
	3		3		Zoom -		Shift + LEFT
	4		4		Zoom +		Shift + RIGHT
	5		5		Vol +		VOL +
	6		6		Vol -		VOL -
	7		7		CH +		CH +
	8		8		CH -		CH -
	9		9		Menu		MENU
	0		0		Exit		EXIT
	Subpage		-/- / EPG		Up		UP
	Pre-Ch		P/C / FAV		Down		DOWN





Original		Replacement		Original		Replacement	
	Right		RIGHT				
	Left		LEFT				
	OK		OK				
	Red		Red (A)				
	Green		Green (B)				
	Yellow		Yellow (C)				
	Blue		Blue (D)				
	Teletext		TEXT				
	Mix		Shift + TEXT				
	Size		V-FOR				
	Info		INFO				
	Index		OPT+				
	Subtitle		Subt.				
	Hold		Pause				
	Reveal		Shift + OPT+				

