








 












 
 


 

 








 
 
 


 
 
 











 


 
 
 
 
 

 
 
 




Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	Tv/Sat		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	FAV		Pre Ch
	Sub		Subt
	Menu		Menu
	EPG		Guide
	TXT		Text
	Exit		Exit
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Vol+ / USB		Vol +
	Vol- / USB Game-		Vol -
	CH/Page+		Ch +
	CH/Page-		Ch -
	Red/SAT		Red
	Green/Zoom		Green
	Green/Zoom		Eject
	Yellow/EPG+		Yellow
	Yellow/EPG+		Shift + Guide
	Blue/Tv/Radio		Blue





	Original	Replacement	Original	Replacement
	Info	Info		
	Audio	Dual		
	M-P	Smart		
	RCL	Media		
	>>	>>		
	>>>	>>>		
	I<<	I<<		
	>>I	>>I		
	Play	Play		
	Rec	Rec		
	Stop	Stop		
	Slow	Shift + Play		
	Pause	Pause		

