




 




Original	Replacement	Original	Replacement
Power	Power	Memory	D. Menu
Sleep	Sleep	Preset Tuner Up	Shift + Up
1 HDMI	1	Preset Tuner	Shift + Down
2 HDMI	2	Tuning Up	Ch +
3 HDMI	3	Tuning Down	Ch -
4 HDMI	4	Info	Info
1 AV	5	Movie	I<<
2 AV	6	Surr.Decode	>>I
3 AV	7	Music	<<
4 AV	8	Straight	Play
5 AV	9	Stereo/Enhance	>>
1 Audio	Guide	BD/DVD	Red
2 Audio	0	TV	Green
V-AUX	AV	CD	Yellow
Tuner	Pre Ch	Radio	Blue
FM Tuner	Smart	Return	Back
AM Tuner	Media	Setup	Menu





	Original	Replacement		Original	Replacement
	Option	 Options			
	Up	 Up			
	Down	 Down			
	Right	 Right			
	Left	 Left			
	Enter	 Ok			
	Vol+	 Vol +			
	Vol-	 Vol -			
	Mute	 Mute			

