







 

 



 







 

 

 



 

 



 

 



 



 

 

 



 



 








 





 


 






| Original | Replacement | Original | Replacement |
|---|---|---|---|
|  System Power |  Power |  Volume+ |  Vol+ |
|  Mute |  Mute / Dimmer |  Preset/CH+ |  CH+ / Page+ |
|  Music |  Sound / Title |  Volume- |  Vol- |
|  Stereo |  Audio / Lang I/II |  Preset/CH- |  CH- / Page- |
|  Night |  Subtitle / EQ |  1 |  1 |
|  Entertain |  Eject / Surround |  2 |  2 |
|  Straight / Effect |  Picture / Format |  3 |  3 |
|  Level |  Zoom / Size |  4 |  4 |
|  Sleep |  Sleep / Timer |  5 |  5 |
|  Movie |  TV/Radio / |  6 |  6 |
|  Set Menu |  Menu / Home |  7 |  7 |
|  Up |  Up |  8 |  8 |
|  A/B/C/D/E |  Info / Angle |  Multi CH In |  9 |
|  Left |  Left |  Standby |  Shift + Power |
|  Select |  OK |  DTV/CBL |  Shift + 1 |
|  Right |  Right |  DVD |  Shift + 2 |
|  Down |  Down |  CD |  Shift + 3 |





| | Original | Replacement | Original | Replacement |
|---|-----------|---|----------|-------------|
|  | VCR |  +  Shift + 4 | | |
|  | TUNER |  +  Shift + 6 | | |
|  | V-AUX |  +  Shift + 7 | | |
|  | MD / CD-R |  +  Shift + 9 | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |

