



Original	Replacement	Original	Replacement
 Standby	 Shift + Power	 2	 2
 System Power	 Power	 HALL	 Audio / Lang I/II
 CD	 Shift + 3	 3	 3
 MD / CD-R	 Shift + 8	 Jazz	 Subtitle / EQ
 TUNER	 Shift + 6	 4	 4
 DVD	 Shift + 2	 Rock	 Eject / Surround
 DTV/CBL	 Shift + 1	 Music	 Picture / Format
 V-AUX	 Shift + 7	 5	 5
 Multi CH In	 Shift + 5	 Entertain	 Zoom / Size
 VCR 1	 Shift + 4	 6	 6
 DVR / VCR2	 Shift + 9	 7	 7
 Sleep	 Sleep / Timer	 TV Thtr	 TV/Radio /
 Volume+	 Vol+	 8	 D.Menu / Top
 Volume-	 Vol-	 8	 8
 Mute	 Mute / Dimmer	 Dolby DTS	 Setup / OPT /
 Stereo	 Sound / Title	 9	 9
 1	 1	 Night	 Text / Goto





Original	Replacement	Original	Replacement
0	0	PTV Seek Mode	Green / APP / Repeat
EX/ES	AV / Input / RDS	PTV Seek Start	Yellow / YouTube / Repeat
Straight / Effect	<< / Tune-	EON	Blue / Prime Video / Random
Enter	Fav / Marker / PC		
Level	Guide / EPG / -/--		
Up	Up		
Preset/CH-	CH- / Page-		
Preset/CH-	I<< / Preset-		
Set Menu	Menu / Home		
A/B/C/D/E	Smart / List		
Left	Left		
Select	OK		
Right	Right		
Preset/CH+	CH+ / Page+		
Down	Down		
Preset/CH+	>>I / Preset+		
FREQ/RDS	Red / Netflix / Search		

Original	Replacement
PTV Seek Mode	Green / APP / Repeat
PTV Seek Start	Yellow / YouTube / Repeat
EON	Blue / Prime Video / Random

