
 


 

 

 
 
 

 

 

 






 

 
 

 


 

 





 




 
 




Original		Replacement		Original		Replacement	
	Power Receiver		Power		Tuning -		Ch -
	Mute		Mute		Up		Up
	1		1		Left		Left
	2		2		Enter		Ok
	3		3		Right		Right
	4		4		Down		Down
	5		5		Return / Repeat		Back
	6		6		Info		Info
	7		7		Phono		Shift + 1
	8		8		Tape		Shift + 2
	9		9		CD		Shift + 3
	0		0		Line 1		Shift + 4
	+10		Guide		Line 2		Shift + 5
	Option		Options		Line 3		Shift + 6
	Volume +		Vol +		Dock		Shift + 7
	Volume -		Vol -		Tuner		Shift + 8
	Tuning +		Ch +		TP		Shift + 9





Original		Replacement		Original	Replacement
	Speakers A		Red		
	Speakers B		Green		
	Enter2		Shift + Ok		
	Menu/▲		Menu		
	Display/▼		Shift + Info		
	Top Menu/Shuffle		Shift + Menu		
	Sleep		Sleep		
	FM		Smart		
	AM		Media		
	Preset+		Blue		
	Preset-		Yellow		
	Power Source		Text		
	Power Source Line 2/Line 3		AV		
	Dimmer		3D		







Original	Replacement
Power Source	Power
Display	Info
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
+10	Guide
Enter	Ok
Play	Play
Pause	Pause
Stop	Stop

Original	Replacement
Disc Skip	Blue
>>	>>
<<	<<
>>	>>
<<	<<
Vol+	Vol +
Vol-	Vol -
Mute	Mute

