




Original	Replacement	Original	Replacement
 Power	 Power	 Subtitle	 Subtitle / EQ
 Eject	 Eject / Surround	 Zoom/Size	 Zoom / Size
 Tv/Radio	 TV/Radio /	 Aspect	 Shift + Picture / Format
 Red/Goto	 Red / Netflix / Search	 Subpage	 Shift + Subtitle / EQ
 Red/Goto	 Shift + Text /	 Media	 Shift + Display / Media
 Green/Angle	 Info / Angle	 Play	 Play / Slow
 Green/Angle	 Green / APP / Repeat	 Pause	 Pause / Step / Freeze
 Yellow/Repeat	 Shift + Green / APP /	 <<	 << / Tune-
 Yellow/Repeat	 Yellow / YouTube / Repeat	 >>	 >> / Tune+
 Blue/A-B	 Shift + Blue / Prime	 Rec	 Rec / Rec Mode
 Blue/A-B	 Blue / Prime Video / Random	 D.Setup	 Setup / OPT /
 FAV	 Fav / Marker / PC	 Stop	 Stop / Hold
 Text	 Text / Goto	 I<<	 I<< / Preset-
 Freeze/Hold	 Shift + Stop /	 I>>	 I>> / Preset+
 Freeze/Hold	 Shift + Pause / Step /	 >>I/Index	 Smart / List
 EPG	 Guide / EPG / -/--	 Menu	 Menu / Home
 D.Menu	 D.Menu / Top	 Lang/Audio	 Audio / Lang I/II

Original	Replacement	Original	Replacement
 Subtitle	 Subtitle / EQ	 Subtitle	 Subtitle / EQ
 Zoom/Size	 Zoom / Size	 Aspect	 Shift + Picture / Format
 Subpage	 Shift + Subtitle / EQ	 Media	 Shift + Display / Media
 Play	 Play / Slow	 Pause	 Pause / Step / Freeze
 <<	 << / Tune-	 >>	 >> / Tune+
 Rec	 Rec / Rec Mode	 D.Setup	 Setup / OPT /
 Stop	 Stop / Hold	 I<<	 I<< / Preset-
 I<<	 I<< / Preset-	 I>>	 I>> / Preset+
 I>>	 I>> / Preset+	 Smart / List	 Smart / List
 Menu	 Menu / Home	 Menu	 Menu / Home
 Lang/Audio	 Audio / Lang I/II	 Lang/Audio	 Audio / Lang I/II





Original	Replacement
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Sleep	 Sleep / Timer
 Down	 Down
 Title/Exit	 Shift + Sound / Title
 Title/Exit	 Exit / Cancel / Clear
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Display	 Display / Media
 CH-	 CH- / Page-
 1	 1
 2	 2
 3	 3

Original	Replacement
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--	 Shift + Guide / EPG / -/--
 0	 0
 Recall	 Back / Return
 Source	 AV / Input / RDS
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title

