



Original	Replacement
	 Power
	 Mute / Dimmer
	 Play / Slow
	 Stop / Hold
	 Rec / Rec Mode
	 << / Tune-
	 >> / Tune+
	 I<< / Preset-
	 >>I / Preset+
	 Audio / Lang I/II
	 Subtitle / EQ
	 TV/Radio /
	 Setup / OPT /
	 Text / Goto
	 Menu / Home
	 Up
	 Info / Angle

Original	Replacement
	 Left
	 OK
	 Right
	 Exit / Cancel / Clear
	 Down
	 Back / Return
	 Vol+
	 CH+ / Page+
	 Vol-
	 CH- / Page-
	 1
	 2
	 3
	 4
	 5
	 6
	 7



