



Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	P.Mode		Shift + Format
	S.Mode		Shift + Dual
	Nicam		List
	Tv/Radio		TV/R
	Display		Info
	PC.A/Zoom		Shift + Eject
	Sleep		Sleep
	Edit		Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Rec Menu		Shift + Rec
	0		0
	Recall		Back
	-/--		Guide
	Play		Play
	Pause/T.Shift		Pause
	I<<		I<<
	>>I		>>I
	Rec		Rec
	Stop		Stop
	<<		<<
	>>		>>
	CH+		Ch +
	CH-		Ch -
	Source		AV





Original		Replacement	
	Vol+		Vol +
	Vol-		Vol -
	FAV		Pre Ch
	Menu		Menu
	Exit		Exit
	Up		Up
	EPG		Shift + Guide
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	PCB/Index		Smart
	Menu/Mix		D. Menu
	Setup/On/Off		Options
	Zoom/Size		Format
	Repeat/Subtitle/Reveal		Text
	Audio/Subpage		Dual

Original		Replacement	
	SUB.T/Freeze/Hol		Subt
	A-B/Update		3D
	Red/Info		Red
	Green/Angle		Green
	Yellow/Slowf		Yellow
	Blue		Blue
	Eject		Eject

