 


 





 


 


 
 







 


 






 






















 


















Original	Replacement	Original	Replacement
 Power	 Power	 -/--/+10	 Guide
 Mute	 Mute	 Swap/Prog	 Pre Ch
 Source	 AV	 Tv Menu	 Menu
 P.Mode	 Shift + Format	 Exit	 Exit
 S.Mode	 Shift + Dual	 Goto/Text	 Text
 I/II/Audio	 Dual	 Display	 Info
 Sleep	 Sleep	 Up	 Up
 1	 1	 Down	 Down
 2	 2	 Right	 Right
 3	 3	 Left	 Left
 4	 4	 Enter	 Ok
 5	 5	 Vol+	 Vol +
 6	 6	 Vol-	 Vol -
 7	 7	 PR+	 Ch +
 8	 8	 PR-	 Ch -
 9	 9	 Red/D.Setup	 Red
 0	 0	 Green/A-B	 Green





Original		Replacement		Original		Replacement	
	Yellow/Angle		Yellow		Recorder		Rec
	Blue/Repeat		Blue		TV/Radio		TV/R
	Subtitle		Subt				
	Play		Play				
	Pause/Hold		Pause				
	Size		Format				
	D.Disc/Reveal		List				
	D.Menu/Mix		D. Menu				
	Zoom/TXT	 + 	Shift + Eject				
	I<</Subpage		I<<				
	>>I/Lang		>>I				
	Stop/FAV-		Stop				
	<</FAV		<<				
	>>/FAV+		>>				
	Eject/EPG		Eject				
	USB/SD		Smart				
	Still		Options				

