 


 



 
 
 






 


 
 




 

 



 









 



 











 









 

 

 





 

 
 
 

 
 
 

 

 
 

 

 
 

 
 
 
 
 
 




Original	Replacement	Original	Replacement
 Power	 Power	 0	 0
 Play/Pause	 Pause	 -/--	 Shift + Guide
 Mute	 Mute	 Jump	 Smart
 Source	 AV	 Menu	 Menu
 P.Mode	 Shift + Format	 Info	 Info
 S.Mode	 Shift + Dual	 Sleep	 Sleep
 I/II/Audio	 Dual	 Exit	 Exit
 P.Size	 Format	 Up	 Up
 1	 1	 Down	 Down
 2	 2	 Right	 Right
 3	 3	 Left	 Left
 4	 4	 Enter	 Ok
 5	 5	 Vol+	 Vol +
 6	 6	 Vol-	 Vol -
 7	 7	 P+	 Ch +
 8	 8	 P-	 Ch -
 9	 9	 Red/D.Setup	 Red






 










 


 

 






 








 



 


 
 

 

 



 



 


 



 
 

 

 


Original		Replacement		Original		Replacement	
	Green/Repeat		Green		Subtitle		Subt
	Yellow/Zoom		Yellow		Guide		Guide
	Blue/Goto		Blue				
	[≡i]/FAV.CH		Pre Ch				
	[≡?]/Freeze	 + 	Shift + Pause				
	[≡◆]/USB/SD		Media				
	[≡+]/Tv/Radio		TV/R				
	Rec		Rec				
	Stop		Stop				
	Open/Close		Eject				
	Play/Pause		Play				
	<<		<<				
	>>		>>				
	I<<		I<<				
	>>I		>>I				
	DVD Menu		D. Menu				
	Text		Text				







Original		Replacement		Original		Replacement	
	Power		Power		S. Mode		Shift + Dual
	Mute		Mute		Source		AV
	1		1		CH +		Ch +
	2		2		CH -		Ch -
	3		3		Up		Up
	4		4		Right		Right
	5		5		Down		Down
	6		6		Left		Left
	7		7		OK		Ok
	8		8		CH. Edit		Smart
	9		9		Menu		Menu
	0		0		Aspect		Format
	-/--		Shift + Guide		Sleep		Sleep
	Repeat		Text		Rec		Rec
	Vol +		Vol +		Rec Menu		Shift + Rec
	Vol -		Vol -		Red		Red
	Pic. Mode		Options		Green		Green





Original	Replacement	Original	Replacement
Yellow	Yellow		
Blue	Blue		
CH. Group	Media		
TV / Radio	TV/R		
I/II Audio	Dual		
Subtitle	Subt		
EPG	Guide		
Info	Info		
Play/Pause / Size	Play		
Stop / Reveal	Stop		
I<< / Text (Page)	I<<		
>>I / Index (Page +)	>>I		
<< / Subpage (FAV -)	<<		
>> / Hold(Fav +)	>>		
Play/Pause / Size	Pause		

