




 









 

 








 



 

 
 





















	Original	Replacement		Original	Replacement
	Standby		Power		Audio / Lang I/II
	Auto		Setup / OPT /		CH+ / Page+
	Mute		Mute / Dimmer		Vol-
	1		1		Display / Media
	2		2		CH- / Page-
	3		3		Up
	4		4		Left
	5		5		Enter
	6		6		Right
	7		7		Menu / Home
	8		8		Down
	9		9		Exit / Cancel / Clear
	-/--		Shift + Guide / EPG / -/--		AV / Input / RDS
	0		0		Picture / Format
	Recall		Back / Return		Sound / Title
	Vol+		Vol+		Sleep / Timer
	Aspect		Shift + Picture / Format		Fav / Marker / PC





Original	Replacement
Fav-	Shift + Down
Fav+	Shift + Up
Guide	Guide / EPG / -/--
Text	Text / Goto
CH List	Smart / List
Subtitle	Subtitle / EQ
TV / Radio	TV/Radio /
Media	Shift + Display / Media
Play / Pause	Play / Slow
Play / Pause	Pause / Step / Freeze
<<	<< / Tune-
>>	>> / Tune+
Rec	Rec / Rec Mode
Stop	Stop / Hold
I<<	I<< / Preset-
>>I	>>I / Preset+
Red	Red / Netflix / Search

Original	Replacement
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random

