 
 

 
 











Original	Replacement	Original	Replacement
 Power	 Power	 Return	 Back / Return
 Open/Close	 Eject / Surround	 Setup	 Setup / OPT /
 1	 1	 Up	 Up
 2	 2	 Title	 Sound / Title
 3	 3	 Left	 Left
 Tv-Mode	 Picture / Format	 Enter	 OK
 4	 4	 Right	 Right
 5	 5	 Menu	 Menu / Home
 6	 6	 Down	 Down
 7	 7	 Audio	 Audio / Lang I/II
 8	 8	 N/P	 Smart / List
 9	 9	 Zoom	 Zoom / Size
 10/0	 0	 Step	 Shift + Pause / Step /
 10+	 Guide / EPG / -/--	 Vol+	 Vol+
 Dvd/Usb	 AV / Input / RDS	 Vol-	 Vol-
 Display	 Display / Media	 I<<	 I<< / Preset-
 PBC	 Fav / Marker / PC	 >>I	 >>I / Preset+

Original	Replacement	Original	Replacement
 Power	 Power	 Return	 Back / Return
 Open/Close	 Eject / Surround	 Setup	 Setup / OPT /
 1	 1	 Up	 Up
 2	 2	 Title	 Sound / Title
 3	 3	 Left	 Left
 Tv-Mode	 Picture / Format	 Enter	 OK
 4	 4	 Right	 Right
 5	 5	 Menu	 Menu / Home
 6	 6	 Down	 Down
 7	 7	 Audio	 Audio / Lang I/II
 8	 8	 N/P	 Smart / List
 9	 9	 Zoom	 Zoom / Size
 10/0	 0	 Step	 Shift + Pause / Step /
 10+	 Guide / EPG / -/--	 Vol+	 Vol+
 Dvd/Usb	 AV / Input / RDS	 Vol-	 Vol-
 Display	 Display / Media	 I<<	 I<< / Preset-
 PBC	 Fav / Marker / PC	 >>I	 >>I / Preset+





Original	Replacement
	Shift + Play /
	<< / Tune-
	>> / Tune+
	Play / Slow
	Pause / Step / Freeze
	Stop / Hold
	Sleep / Timer
	Text / Goto
	Mute / Dimmer
	Blue / Prime Video / Random
	TV/Radio /
	Exit / Cancel / Clear
	Subtitle / EQ
	Info / Angle
	Green / APP / Repeat
	Yellow / YouTube / Repeat

Original	Replacement

