 

 

 

 

 

 

 

 


















































 













Original	Replacement	Original	Replacement
 Power	 Power	 Dev.List	 Display / Media
 Mute	 Mute / Dimmer	 EPG	 Guide / EPG / -/-
 1	 1	 Subtitle	 Subtitle / EQ
 2	 2	 Text	 Text / Goto
 3	 3	 Auto	 Setup / OPT /
 Lang	 Audio / Lang I/II	 Menu	 Menu / Home
 4	 4	 Zoom	 Zoom / Size
 5	 5	 Info	 Info / Angle
 6	 6	 Exit	 Exit / Cancel / Clear
 Game	 Picture / Format	 Up	 Up
 7	 7	 CH+	 CH+ / Page+
 8	 8	 Left	 Left
 9	 9	 Vol-	 Vol-
 Tv/Radio	 TV/Radio /	 Enter	 OK
 FAV	 Fav / Marker / PC	 Right	 Right
 0	 0	 Vol+	 Vol+
 Recall	 Back / Return	 CH-	 CH- / Page-

Original	Replacement	Original	Replacement
 Power	 Mute / Dimmer	 Shift	
 TV	 DVD	 SAT	 AUX
 SLOW	 STEP-FREEZE	 HOLD	 REC MODE
 TUNE-	 TUNE+	 PRESET-	 PRESET+
 TITLE	 LANG I/II	 EQ	 SURROUND
 SOUND	 AUDIO	 SUBTITLE	 PROGRAM
 FORMAT	 ZOOM	 SLEEP	 TV RADIO
 PICTURE	 OPT-TOOLS	 GOTO	 RDS
 TOP MENU	 OPT-TOOLS	 GOTO	 AV INPUT
 D.MENU	 SETUP	 TEXT	 AV INPUT
 HOME	 ANGLE	 INFO	 INFO
 MENU	 OK	 CLEAR	 RETURN
 EXIT	 SMART	 MEDIA	 CH PAGE
 CANCEL	 DISPLAY	 TV	 DVD
 VOL +	 CH PAGE	 CD - STB	 VIDEO
 VOL -	 TV	 TAPE	 TUNER
 TV	 DVD	 AUX - HDD	 USB
 1	 2	 HDMI - BAT	 PC
 2	 3	 GUIDE EPG	 FAV MARKER
3	4	NETFLIX	APP
4	5	YouTube	Prime Video
5	6	SEARCH	REPEAT
6	7	REPEAT A-B	RANDOM
7	8		
8	9		



