


























 











 

 

 













 









Original	Replacement	Original	Replacement
 Power	 Power	 Left	 Left
 Mute	 Mute / Dimmer	 OK	 OK
 1	 1	 Right	 Right
 2	 2	 Home	 D.Menu / Top
 3	 3	 Down	 Down
 4	 4	 Exit	 Exit / Cancel / Clear
 5	 5	 Netflix	 Shift + Red / Netflix /
 6	 6	 Vol+	 Vol+
 7	 7	 Info	 Info / Angle
 8	 8	 PR+	 CH+ / Page+
 9	 9	 Vol-	 Vol-
 CH List	 Smart / List	 EPG	 Guide / EPG / -/-
 0	 0	 PR-	 CH- / Page-
 Return/Back	 Back / Return	 Rec	 Rec / Rec Mode
 Menu	 Menu / Home	 Nicam I/II	 Audio / Lang I/II
 Up	 Up	 Text	 Text / Goto
 Source	 AV / Input / RDS	 AD/Subpage	 Sound / Title

Original	Replacement	Original	Replacement
 Power	 Mute / Dimmer	 Shift	 Shift
 TV	 DVD	 SAT	 AUX
 Slow	 Step-Freeze	 Hold	 Rec Mode
 Tune-	 Tune+	 PreSet-	 PreSet+
 Title	 Lang I/II	 EQ	 Surround
 Sound	 Audio	 Subtitle	 Program
 Format	 Size	 Timer	 TV Radio
 Picture	 Zoom	 Sleep	 RDS
 Top Menu / D.Menu	 Opt-Tools	 Goto	 AV Input
 Home	 Angle	 Menu	 Info
 Clear	 Exit / Cancel / Clear	 Return	 Back
 Exit	 List	 Smart	 CH Page
 Cancel	 Media	 Display	 CH Page
 Vol+	 Media	 Display	 CH Page
 Vol-	 TV	 DVD	 CD-ITB
 PR+	 Video	 Tape	 Tuner
 Vol-	 AUX-HDD	 USB	 Bluetooth
 EPG	 HDMI-BAT	 PC	 FAV Marker
 PR-	 Guide EPG	 0	 Rec Mode
Rec	Netflix	APP	YouTube
Nicam I/II	Lang I/II	Audio	Prime Video
Text	Goto	Text	Text
AD/Subpage	Title	Sound	Sound



