


 

 

 

 







 

 



 







 



 
 





Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Source		AV / Input / RDS
	0		0
	Info		Info / Angle
	DMP		D.Menu / Top
	Up		Up
	EPG		Guide / EPG / -/--

Original	Replacement	Original	Replacement
	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol +		Vol+
	List		Smart / List
	CH +		CH+ / Page+
	Vol -		Vol-
	CH -		CH- / Page-
	Fav		Fav / Marker / PC
	Sleep		Sleep / Timer
	Index		Display / Media
	Recall		Back / Return
	Red / <<		Red / Netflix / Search
	Red / <<		<< / Tune-





 

 

 

 

 

 

 

 

 





 

 

 











 

 











 

 



 

 
 






Original		Replacement		Original	Replacement
	Green / >>		>> / Tune+		
	Green / >>		Green / APP / Repeat		
	Yellow / I<<		I<< / Preset-		
	Yellow / I<<		Yellow / YouTube / Repeat		
	Blue / >>I		Blue / Prime Video / Random		
	Blue / >>I		>>I / Preset+		
	Text / Play/Pause		Text / Goto		
	Text / Play/Pause		Pause / Step / Freeze		
	Text / Play/Pause		Play / Slow		
	Stop / Still		Stop / Hold		
	Timer / Subtitle		Subtitle / EQ		
	Size / Aspect		Zoom / Size		
	Cancel [≡X]		Shift + Exit / Cancel / Clear		
	Radio		TV/Radio /		
	Audio / I/II		Audio / Lang I/II		
	Rec		Rec / Rec Mode		





Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	[≡?]/Source		AV / Input / RDS
	0		0
	[≡i]/Info		Info / Angle
	DMP		D.Menu / Top
	Up		Up
	EPG		Guide / EPG / -/--
	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	List		Smart / List
	CH+		CH+ / Page+
	Vol-		Vol-
	CH-		CH- / Page-
	♥		Fav / Marker / PC
	Sleep		Sleep / Timer
	Index		Display / Media
	Back		Back / Return
	Red		Red / Netflix / Search
	<<		<< / Tune-





Original	Replacement	Original	Replacement
	Green  Green / APP / Repeat		
	>>  >> / Tune+		
	Yellow  Yellow / YouTube / Repeat		
	I<<  I<< / Preset-		
	Blue  Blue / Prime Video / Random		
	>>I  >>I / Preset+		
	Play  Play / Slow		
	Pause  Pause / Step / Freeze		
	[≡]  Text / Goto		
	Stop/Still  Stop / Hold		
	[≡+]  Picture / Format		
	[≡o]/Subtitle  Subtitle / EQ		
	[≡◆]/[+]  Zoom / Size		
	[≡x]  Setup / OPT /		
	Radio  TV/Radio /		
	Audio  Audio / Lang I/II		
	Rec  Rec / Rec Mode		

