













 

 



 

 



 

 

 







Original	Rechange
 POWER	 Power
 INFO	 Info / Angle
 MUTE	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 SOURCE	 AV / Input / RDS
 0	 0
 AUDIO	 Audio / Lang I/II
 FORMAT	 Picture / Format
 BACK	 Back / Return

Original	Rechange
 MENU	 Menu / Home
 EXIT	 Exit / Cancel / Clear
 UP	 Up
 LEFT	 Left
 ENTER	 OK
 RIGHT	 Right
 VOL+	 Vol+
 DOWN	 Down
 CH+	 CH+ / Page+
 VOL-	 Vol-
 CH-	 CH- / Page-
 LIST	 Smart / List
 SLEEP	 Sleep / Timer
 EPG	 Guide / EPG / -/-
 FAV	 Fav / Marker / PC
 <<	 << / Tune-
 RED	 Red / Netflix / Search





Original		Recharge		Original		Recharge	
	>>		>> / Tune+				
	GREEN		Green / APP / Repeat				
	I<<		I<< / Preset-				
	YELLOW		Yellow / YouTube / Repeat				
	BLUE		Blue / Prime Video / Random				
	>>		>>  / Preset+				
	PLAY		Play / Slow				
	PAUSE		Pause / Step / Freeze				
	TEXT		Text / Goto				
	STOP		Stop / Hold				
	SUBTITLE		Subtitle / EQ				
	RADIO		TV/Radio /				
	OPT		Setup / OPT /				
	DMP		Display / Media				
	INDEX		D.Menu / Top				
	REC		Rec / Rec Mode				

