

 





























 



















 

 

 

 

 

 

 

 



 
























 
















 



Original	Recharge
 Power	 Power
 123 / keypad	 Eject / Surround
 Extra	 D.Menu / Top
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Return	 Back / Return
 Vol Up	 Vol+
 Home / Hub	 Smart / List
 CH Up	 CH+ / Page+
 Vol Down	 Vol-
 CH Down	 CH- / Page-
 Play / Pause	 Shift + Play /
 Mute	 Mute / Dimmer
 Play	 Play / Slow

Original	Recharge
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode
 << / Tune-	 << / Tune-
 >> / Tune+	 >> / Tune+
 I<< / Preset-	 I<< / Preset-
 >>I / Preset+	 >>I / Preset+
 S.Mode	 Sound / Title
 AD	 Audio / Lang I/II
 AD / Subt.	 Subtitle / EQ
 Picture	 Picture / Format
 P.Size	 Zoom / Size
 Sleep	 Sleep / Timer
 Auto Prog	 TV/Radio /
 Tools	 Setup / OPT /
 TTX/MIX	 Text / Goto
 Source	 AV / Input / RDS





Original	Rechange	Original	Rechange
Menu	 Menu / Home		
Info	 Info / Angle		
Exit	 Exit / Cancel / Clear		
CH List	 Display / Media		
1	 1		
2	 2		
3	 3		
4	 4		
5	 5		
6	 6		
7	 7		
8	 8		
9	 9		
Guide	 Guide / EPG / -/--		
0	 0		
Fav CH	 Fav / Marker / PC		
Search	 +  Shift + Yellow / YouTube / Repeat		

Original	Rechange	Original	Rechange
Prime Video	 +  Shift + Blue / Prime		
Rakuten Tv	 +  Shift + Green / APP /		
Netflix	 +  Shift + Red / Netflix /		
Still	 +  Shift + Pause / Step /		
Dual I-II	 +  Shift + Audio / Lang I/II		
Add / Del	 +  Shift + Eject / Surround		
TV / DTV	 +  Shift + TV/Radio / Program		
E-Manual	 +  Shift + OK		
Media P.	 +  Shift + Display / Media		
-/--	 +  Shift + Guide / EPG / -/--		
PRE-CH	 +  Shift + Fav / Marker / PC		
Red	 Red / Netflix / Search		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		
Green	 Green / APP / Repeat		

