



| Original | Rechange |
|------------|-----------------------|
| Mute | Mute / Dimmer |
| Power | Power |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| 16:9 | Picture / Format |
| 0/FAV | Fav / Marker / PC |
| 0/FAV | 0 |
| [O]/Repeat | Shift + Green / APP / |
| Vol+ | Vol+ |
| Input | AV / Input / RDS |

| Original | Rechange |
|------------|----------------------------|
| P+ | CH+ / Page+ |
| Vol- | Vol- |
| EPG/?/A-B | Shift + Yellow / YouTube / |
| EPG/?/A-B | Guide / EPG / -/-- |
| P- | CH- / Page- |
| Up | Up |
| Left | Left |
| OK | OK |
| Right | Right |
| Down | Down |
| Q/Double | Shift + Red / Netflix / |
| M | Menu / Home |
| ← | Back / Return |
| i | Info / Angle |
| Red | Red / Netflix / Search |
| Play/Pause | Play / Slow |
| Green | Green / APP / Repeat |





| Original | Recharge | Original | Recharge |
|---|----------|---|-----------------------------|
|  | << |  | << / Tune- |
|  | Yellow |  | Yellow / YouTube / Repeat |
|  | Stop |  | Stop / Hold |
|  | Blue |  | Blue / Prime Video / Random |
|  | >> |  | >> / Tune+ |
|  | I<< |  | I<< / Preset- |
|  | TXT |  | Text / Goto |
|  | >>I |  | >>I / Preset+ |
|  | [...] |  | Subtitle / EQ |
|  | Audio |  | Audio / Lang I/II |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

