









| Original                                                                                    | Rechange                                                                                             |
|---------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------|
|  Power     |  Power              |
|  Mute      |  Mute / Dimmer      |
|  1         |  1                  |
|  2         |  2                  |
|  3         |  3                  |
|  4         |  4                  |
|  5         |  5                  |
|  6         |  6                  |
|  7         |  7                  |
|  8        |  8                 |
|  9       |  9                |
|  0       |  0                |
|  DTV/ATV |  D.Menu / Top     |
|  Recall  |  Back / Return    |
|  P.Mode  |  Picture / Format |
|  S.Mode  |  Sound / Title    |
|  Sleep   |  Sleep / Timer    |














 


 



 






| Original                                                                                       | Rechange                                                                                                  |
|------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|
|  Menu       |  Menu / Home           |
|  Source     |  AV / Input / RDS      |
|  Up         |  Up                    |
|  Left       |  Left                  |
|  Enter      |  OK                    |
|  Right      |  Right                 |
|  Down       |  Down                  |
|  Exit       |  Exit / Cancel / Clear |
|  Display    |  Display / Media       |
|  Vol+      |  Vol+                 |
|  Vol-     |  Vol-                |
|  MTS      |  Info / Angle        |
|  Rec List |  Smart / List        |
|  CH+      |  CH+ / Page+         |
|  CH-      |  CH- / Page-         |
|  FAV/List |  Fav / Marker / PC   |
|  Rec      |  Rec / Rec Mode      |



 




 


































| Original                                                                                    | Rechange                                                                                             |
|---------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------|
|  Power     |  Power              |
|  Mute      |  Mute / Dimmer      |
|  1         |  1                  |
|  2         |  2                  |
|  3         |  3                  |
|  4         |  4                  |
|  5         |  5                  |
|  6         |  6                  |
|  7         |  7                  |
|  8         |  8                  |
|  9       |  9                |
|  0       |  0                |
|  DTV/ATV |  D.Menu / Top     |
|  Recall  |  Back / Return    |
|  P.Mode  |  Picture / Format |
|  S.Mode  |  Sound / Title    |
|  Sleep   |  Sleep / Timer    |

| Original                                                                                       | Rechange                                                                                                  |
|------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|
|  Menu       |  Menu / Home           |
|  Source     |  AV / Input / RDS      |
|  Up         |  Up                    |
|  Left       |  Left                  |
|  Enter      |  OK                    |
|  Right      |  Right                 |
|  Down       |  Down                  |
|  Exit       |  Exit / Cancel / Clear |
|  Display    |  Display / Media       |
|  Vol+       |  Vol+                  |
|  Vol-     |  Vol-                |
|  MTS      |  Info / Angle        |
|  Rec List |  Smart / List        |
|  CH+      |  CH+ / Page+         |
|  CH-      |  CH- / Page-         |
|  FAV/List |  Fav / Marker / PC   |
|  Rec      |  Rec / Rec Mode      |



