









































 





















 
















Original		Rechange		Original		Rechange	
	Power		Power		CH+		CH+ / Page+
	Mute		Mute / Dimmer		Vol-		Vol-
	1		1		Source		AV / Input / RDS
	2		2		CH-		CH- / Page-
	3		3		Up		Up
	4		4		Left		Left
	5		5		OK		OK
	6		6		Right		Right
	7		7		Exit		Exit / Cancel / Clear
	8		8		Down		Down
	9		9		Menu		Menu / Home
	CH.List		Smart / List		Rec		Rec / Rec Mode
	0		0		Timeshift		D.Menu / Top
	Recall		Back / Return		Timer		Shift + Sleep / Timer
	Vol+		Vol+		Rec.List		Shift + Rec / Rec Mode
	PIC.Mode		Picture / Format		Red		Red / Netflix / Search
	S.Mode		Sound / Title		Green		Green / APP / Repeat





Original	Rechange
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Aspect	 Shift + Picture / Format
 Tv/Radio	 TV/Radio /
 Sleep	 Sleep / Timer
 Subtitle	 Subtitle / EQ
 Index	 Info / Angle
 Reveal	 Setup / OPT /
 Audio	 Audio / Lang I/II
 Display	 Display / Media
 Text	 Text / Goto
 Size	 Zoom / Size
 Play	 Play / Slow
 Subpage	 Eject / Surround
 Pause	 Pause / Step / Freeze
 Hold	 Shift + Stop /
 Stop	 Stop / Hold

Original	Rechange
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+

