













 



 

 

 















Original	Rechange
 Power	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 PRE-CH	 Fav / Marker / PC
 TTX/MIX	 Text / Goto
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer

Original	Rechange
 PR+	 CH+ / Page+
 PR-	 CH- / Page-
 CH.List	 Shift + Smart / List
 Menu	 Menu / Home
 Smart Hub	 Smart / List
 Guide	 Guide / EPG / -/-
 Tools	 Setup / OPT /
 Info	 Info / Angle
 Up	 Up
 Down	 Down
 Right	 Right
 Return	 Back / Return
 Left	 Left
 Enter	 OK
 Exit	 Exit / Cancel / Clear
 Red/A	 Red / Netflix / Search
 Green/B	 Green / APP / Repeat





Original	Recharge
Yellow/C	Yellow / YouTube / Repeat
Blue/D	Blue / Prime Video / Random
E-Manual	D.Menu / Top
Stop	Stop / Hold
Rec	Rec / Rec Mode
<</I<<	<< / Tune-
AD/Subt.	Subtitle / EQ
AD/Subt.	Audio / Lang I/II
Play	Play / Slow
Pause	Pause / Step / Freeze
>>/>>I	>> / Tune+

Original	Recharge

