

 









 

 
 
 









 

 
 
 
 
 

 
 

 
 
 
 
 


 
 
 



 


 
 

 


 
 



 
 
 
 
 




Original		Rechange		Original		Rechange	
	Power		Power		Guide		Guide
	[≡_]/Source		AV		Vol+		Vol +
	1		1		Vol-		Vol -
	2		2		Mute		Mute
	3		3		P+		Ch +
	4		4		P-		Ch -
	5		5		[≡i]/Menu		Menu
	6		6		[≡x]/Exit		Exit
	7		7		Up		Up
	8		8		Down		Down
	9		9		Right		Right
	0		0		Left		Left
	-/--	 + 	Shift + Guide		Enter		Ok
	[≡o]/PRE-CH		Pre Ch		Return		Back
	Tv/DTV		TV/R		[≡?]/Info		Info
	CH.List		List		[≡]/[≡]/TTX/MIX		Text
	D.Menu		D. Menu		Red		Red



