 



 




 

 

 




 
 

 





 


 
 
 


 

 
 


 

 

 




 



 
 


 
 


 
 
 


 
 





Original	Recharge	Original	Recharge
 Power	 Power	 PR+	 Ch +
 Source	 AV	 PR-	 Ch -
 1	 1	 CH List	 List
 2	 2	 Content	 Smart
 3	 3	 Menu	 Menu
 4	 4	 Guide	 Guide
 5	 5	 Info	 Info
 6	 6	 Tools	 Options
 7	 7	 Up	 Up
 8	 8	 Down	 Down
 9	 9	 Right	 Right
 0	 0	 Left	 Left
 TTX/MIX	 Text	 Enter	 Ok
 PRE-CH	 Pre Ch	 Return	 Back
 Vol+	 Vol +	 Exit	 Exit
 Vol-	 Vol -	 Red/A	 Red
 Mute	 Mute	 Green/B	 Green





Original		Recharge		Original	Recharge
	Yellow/C		Yellow		
	Blue/D		Blue		
	Internet TV		TV/R		
	Media.P		Media		
	Dual I-II		Dual		
	AD		Shift + Subt		
	P.Size		Format		
	Subt.		Subt		
	<<		<<		
	Pause		Pause		
	>>		>>		
	Rec		Rec		
	Play		Play		
	Stop		Stop		

