



Original		Rechange		Original		Rechange	
	Power		Power		FAV-	+	Shift + CH- /
	Mute		Mute / Dimmer		CH+		CH+ / Page+
	1		1		P.Mode		Picture / Format
	2		2		Vol+		Vol+
	3		3		CH-		CH- / Page-
	4		4		S.Mode		Sound / Title
	5		5		Vol-		Vol-
	6		6		Source		AV / Input / RDS
	7		7		Sleep		Sleep / Timer
	8		8		Aspect	+	Shift + Picture / Format
	9		9		Info		Info / Angle
	-/--	+	Shift + Guide / EPG / -/--		Up		Up
	0		0		Left		Left
	Recall		Back / Return		OK		OK
	Audio		Audio / Lang I/II		Right		Right
	FAV+	+	Shift + CH+ /		Menu		Menu / Home
	FAV		Fav / Marker / PC		Down		Down





Original	Recharge
Exit	Exit / Cancel / Clear
Text	Text / Goto
Index	Display / Media
Play/Mix	Play / Slow
Pause	Pause / Step / Freeze
Stop/Reveal	Stop / Hold
<</Hold	<< / Tune-
<</Hold	Shift + Stop /
>>/Subpage	>> / Tune+
Size	Zoom / Size
I<<	I<< / Preset-
>>I/Cancel	>>I / Preset+
T-Shift	Smart / List
Tv/Radio	TV/ Radio /
Rec	Rec / Rec Mode
EPG	Guide / EPG / -/--
Red	Red / Netflix / Search

Original	Recharge
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random

