



Original	Recharge
Power	Power
PRO/TV/TXT	TV/Radio /
Slow/Cancel	Shift + Play /
Rep/Reveal	Shift + Back / Return
TV/AV	AV / Input / RDS
<</Hold	<< / Tune-
>>/Size	>> / Tune+
<</Subpage	<< / Preset-
>> /Index	>>  / Preset+
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8

Original	Recharge
9	9
FAV	Fav / Marker / PC
0	0
Recall	Back / Return
Vol+	Vol+
CH+	CH+ / Page+
Up	Up
Left	Left
OK	OK
Right	Right
Vol-	Vol-
Down	Down
CH-	CH- / Page-
Menu	Menu / Home
Exit	Exit / Cancel / Clear
Nicam/A2	Text / Goto
Display	Display / Media





Original	Rechange
 Mute	 Mute / Dimmer
 Picture	 Picture / Format
 Sound	 Sound / Title
 Sleep	 Sleep / Timer
 Subtitle	 Subtitle / EQ
 LAN/EPG	 Audio / Lang I/II
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 Set/CH/List	 Setup / OPT /
 D-Menu/List	 D.Menu / Top
 Stop	 Stop / Hold
 Record	 Rec / Rec Mode
 Open/Close	 Eject / Surround
 Red/Zoom	 Red / Netflix / Search
 Green/Goto	 Green / APP / Repeat
 Yellow/Title	 Yellow / YouTube / Repeat
 Blue/Angle/Screen	 Blue / Prime Video / Random

Original	Rechange

