





 

 
 
 

 
 


 











Original	Rechange
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 CH.List	 List
 Recall	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -
 PIC.Mode	 Shift + Format

Original	Rechange
 S.Mode	 Shift + Dual
 Source	 AV
 CH+	 Ch +
 CH-	 Ch -
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Exit	 Exit
 Menu	 Menu
 Rec	 Rec
 Timeshift	 Options
 Timer	 Shift + AV
 Rec.List	 Media
 Red	 Red
 Green	 Green





Original		Rechange		Original		Rechange	
	Yellow		Yellow		>>		>>
	Blue		Blue				
	Aspect		Format				
	Tv/Radio		TV/R				
	Sleep		Sleep				
	Subtitle		Subt				
	Index		Guide				
	Reveal		D. Menu				
	Audio		Dual				
	Display		Info				
	Text		Text				
	Play/Size		Play				
	Pause/Subpage		Pause				
	Stop/Hold		Stop				
	I<<		I<<				
	>>I		>>I				
	<<		<<				

