 








 























 

 



 



 



 



 

 

 
























Original	Rechange	Original	Rechange
 Power	 Power	 PR-	 CH -
 Mute	 MUTE	 Up	 UP
 1	 1	 Down	 DOWN
 2	 2	 Right	 RIGHT
 3	 3	 Left	 LEFT
 4	 4	 OK/List	 OK
 5	 5	 Vol+	 VOL +
 6	 6	 Vol-	 VOL -
 7	 7	 Info	 INFO
 8	 8	 Exit	 EXIT
 9	 9	 ↑	 Fast Forward
 0	 0	 ↓	 Rewind
 Tv/Radio	 TV/R	 Pause	 Pause
 ←PR	 BACK	 Red	 Red (A)
 EPG	 -/-- / EPG	 Green	 Green (B)
 Menu	 MENU	 Yellow	 Yellow (C)
 PR+	 CH +	 Blue	 Blue (D)





Original	Rechange	Original	Rechange
 Audio	 Audio		
 TXT	 TEXT		
 [...]	 Subt.		
 Audio L/R	 OPT+		
 [+]	 WIDE		
 FAV	 P/C / FAV		
 UHF	 VOD		
 PAL/NTSC	 V-FOR		
 Tv/AV	 SRC		

