

 
 




Original	Rechange
 Power	 Power
 Portal/Energy Saving	 Sleep / Timer
 []/Ratio	 Picture / Format
 Input	 AV / Input / RDS
 TV	 TV/Radio /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 List	 Smart / List
 0	 0
 Q.View	 D.Menu / Top

Original	Rechange
 Vol+	 Vol+
 Fav	 Fav / Marker / PC
 PR+/Page Up	 CH+ / Page+
 Vol-	 Vol-
 3D	 Zoom / Size
 PR-/Page Down	 CH- / Page-
 Mute	 Mute / Dimmer
 Settings	 Setup / OPT /
 Info/Home	 Info / Angle
 Q.Menu/3D	 Menu / Home
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Back	 Back / Return
 Guide	 Guide / EPG / -/-





Original	Recharge
EXIT Exit	CLEAR EXIT CANCEL Exit / Cancel / Clear
Red Red	NETFLIX SEARCH Red / Netflix / Search
Green Green	APP REPEAT Green / APP / Repeat
Yellow Yellow	YouTube REPEAT A-B Yellow / YouTube / Repeat
Blue Blue	Prime Video RANDOM Blue / Prime Video / Random
TEXT Text	GOTO TEXT Text / Goto
T.OPT T.Opt	SHIFT + OPT-TOOLS SETUP Shift + Setup / OPT / Tools
SUBTITLE Subtitle	EQ SUBTITLE Subtitle / EQ
Stop Stop	HOLD Stop / Hold
Play Play	SLOW Play / Slow
Pause Pause	STEP-FREEZE Pause / Step / Freeze
<< button"/> << <<	TUNE- << / Tune-
>> >>	TUNE+ >> / Tune+
Simplink Simplink	MEDIA DISPLAY Display / Media
AD AD	LANG I/II AUDIO Audio / Lang I/II
REC Rec	REC MODE Rec / Rec Mode
MY APPS My APPS	SHIFT + APP REPEAT Shift + Green / APP / Repeat

Original	Recharge

