



Original	Rechange	Original	Rechange
	Power		Power
	Portal/Energy Saving		Sleep / Timer
	[]/Ratio		Picture / Format
	Input		AV / Input / RDS
	TV		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	List		Smart / List
	0		0
	Q.View		D.Menu / Top

Original	Rechange	Original	Rechange
	Vol+		Vol+
	Fav		Fav / Marker / PC
	PR+/Page Up		CH+ / Page+
	Vol-		Vol-
	3D		Zoom / Size
	PR-/Page Down		CH- / Page-
	Mute		Mute / Dimmer
	Settings		Setup / OPT /
	Info/Home		Info / Angle
	Q.Menu/3D		Menu / Home
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Back		Back / Return
	Guide		Guide / EPG / -/-





	Original	Recharge		Original	Recharge
	Exit	CLEAR EXIT CANCEL	Exit / Cancel / Clear		
	Red	NETFLIX SEARCH	Red / Netflix / Search		
	Green	APP REPEAT	Green / APP / Repeat		
	Yellow	YouTube REPEAT A-B	Yellow / YouTube / Repeat		
	Blue	Prime Video RANDOM	Blue / Prime Video / Random		
	Text	GOTO TEXT	Text / Goto		
	T.Opt	SHIFT + OPT-TOOLS SETUP	Shift + Setup / OPT / Tools		
	Subtitle	EQ SUBTITLE	Subtitle / EQ		
	Stop	HOLD	Stop / Hold		
	Play	SLOW	Play / Slow		
	Pause	STEP-FREEZE	Pause / Step / Freeze		
	<<	TUNE-	<< / Tune-		
	>>	TUNE+	>> / Tune+		
	Simplink	MEDIA DISPLAY	Display / Media		
	AD	LANG I/II AUDIO	Audio / Lang I/II		
	Rec	REC MODE	Rec / Rec Mode		
	My APPS	SHIFT + APP REPEAT	Shift + Green / APP / Repeat		

	Original	Recharge

