



Original	Rechange	Original	Rechange
Tv	TV/Radio /	Recall	Shift + Back / Return
Power	Power	Red	Red / Netflix / Search
World	Smart / List	Green	Green / APP / Repeat
[=]/Text	Text / Goto	Yellow	Yellow / YouTube / Repeat
Sleep	Sleep / Timer	Blue	Blue / Prime Video / Random
Music/Movie/Phot	Sound / Title	Vol+	Vol+
1	1	Mute	Mute / Dimmer
2	2	PR+	CH+ / Page+
3	3	Vol-	Vol-
4	4	i	Info / Angle
5	5	PR-	CH- / Page-
6	6	Menu	Menu / Home
7	7	Up	Up
8	8	Q.Menu	D.Menu / Top
9	9	Left	Left
Source/Games	AV / Input / RDS	OK	OK
0	0	Right	Right





Original	Rechange	Original	Rechange
	Back		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	[≡]..		Setup / OPT /
	Lang		Audio / Lang I/II
	O/*		Zoom / Size
	Q./.*		Picture / Format
	Play		Play / Slow
	Stop		Stop / Hold
	<<		<< / Tune-
	>>		>> / Tune+
	Pause		Pause / Step / Freeze
	Rec		Rec / Rec Mode
	Guide		Guide / EPG / -/--
	[-O-]		Display / Media

