 















 



 
 



 
 

 
 






 



 



 


 
 



 



 



 











Original	Recharge	Original	Recharge
 Power	 Power	 Tv Guide	 Guide / EPG / -/--
 Mute	 Mute / Dimmer	 0	 0
 DTV	 Shift + 1	 Recall	 Back / Return
 DTV	 TV/Radio /	 Vol+	 Vol+
 Radio	 Shift + TV/Radio / Program	 P.Mode	 Picture / Format
 Radio	 Shift + 6	 CH+	 CH+ / Page+
 USB	 Shift + 8	 S.Mode	 Sound / Title
 DVD	 Shift + 2	 Vol-	 Vol-
 1	 1	 FAV	 Fav / Marker / PC
 2	 2	 CH-	 CH- / Page-
 3	 3	 Menu	 Menu / Home
 4	 4	 Up	 Up
 5	 5	 Exit	 Exit / Cancel / Clear
 6	 6	 Left	 Left
 7	 7	 OK	 OK
 8	 8	 Right	 Right
 9	 9	 Source	 AV / Input / RDS





Original	Rechange	Original	Rechange
 Down	 Down	 Rec List/DVD	 Setup / OPT /
 Info	 Info / Angle	 Rec List/DVD	 Smart / List
 Aspect	 Shift + Picture / Format	 << PVR/DVD	 << / Tune-
 Sleep	 Sleep / Timer	 >> PVR/DVD	 >> / Tune+
 Audio	 Audio / Lang I/II	 Pause	 Pause / Step / Freeze
 Subtitle	 Subtitle / EQ	 Play	 Play / Slow
 Text	 Text / Goto	 Red/Goto	 Shift + Text /
 Text Hold	 Shift + Stop /	 Red/Goto	 Red / Netflix / Search
 Zoom/Text/DVD	 Zoom / Size	 Green/A-B	 Green / APP / Repeat
 Power/Display	 Display / Media	 Green/A-B	 Shift + Yellow / YouTube /
 Power/Display	 Shift + Power	 Yellow/Angle/3D	 Yellow / YouTube / Repeat
 DVD Menu	 D.Menu / Top	 Yellow/Angle/3D	 Shift + Info / Angle
 Rec	 Rec / Rec Mode	 Blue/Repeat	 Blue / Prime Video / Random
 I<<	 I<< / Preset-	 Blue/Repeat	 Shift + Green / APP /
 >>I	 >>I / Preset+		
 Stop/Eject	 Stop / Hold		
 Stop/Eject	 Eject / Surround		

