 















 
 


 
 



 
 

 
 






 



 



 


 
 



 



 



 











Original		Rechange		Original		Rechange	
	Power		Power		Tv Guide		Guide / EPG / -/--
	Mute		Mute / Dimmer		0		0
	DTV		Shift + 1		Recall		Back / Return
	DTV		TV/Radio /		Vol+		Vol+
	Radio		Shift + TV/Radio / Program		P.Mode		Picture / Format
	Radio		Shift + 6		CH+		CH+ / Page+
	USB		Shift + 8		S.Mode		Sound / Title
	DVD		Shift + 2		Vol-		Vol-
	1		1		FAV		Fav / Marker / PC
	2		2		CH-		CH- / Page-
	3		3		Menu		Menu / Home
	4		4		Up		Up
	5		5		Exit		Exit / Cancel / Clear
	6		6		Left		Left
	7		7		OK		OK
	8		8		Right		Right
	9		9		Source		AV / Input / RDS





Original		Rechange		Original		Rechange	
	Down		Down		Rec List/DVD		Setup / OPT /
	Info		Info / Angle		Rec List/DVD		Smart / List
	Aspect		Shift + Picture / Format		<< PVR/DVD		<< / Tune-
	Sleep		Sleep / Timer		>> PVR/DVD		>> / Tune+
	Audio		Audio / Lang I/II		Pause		Pause / Step / Freeze
	Subtitle		Subtitle / EQ		Play		Play / Slow
	Text		Text / Goto		Red/Goto		Shift + Text /
	Text Hold		Shift + Stop /		Red/Goto		Red / Netflix / Search
	Zoom/Text/DVD		Zoom / Size		Green/A-B		Green / APP / Repeat
	Power/Display		Display / Media		Green/A-B		Shift + Yellow / YouTube /
	Power/Display		Shift + Power		Yellow/Angle/3D		Yellow / YouTube / Repeat
	DVD Menu		D.Menu / Top		Yellow/Angle/3D		Shift + Info / Angle
	Rec		Rec / Rec Mode		Blue/Repeat		Blue / Prime Video / Random
	I<<		I<< / Preset-		Blue/Repeat		Shift + Green / APP /
	>>I		>>I / Preset+				
	Stop/Eject		Stop / Hold				
	Stop/Eject		Eject / Surround				

