

 
 





 
 
 








 




 







 
 
 

 
 
 






 
 

 




 
 


 
 
 
 

 








Original		Recharge		Original		Recharge	
	Power		Power		0		0
	Mute		Mute		- / - -		Gui de
	Up		Up		Exi t		Exi t
	Down		Down		P<P/ Swap		Pre Ch
	Ri ght		Ri ght		Vol +		Vol +
	Lef t		Lef t		Vol -		Vol -
	OK/ Sel ect		Ok		P+		Ch +
	M		Menu		P-		Ch -
	1		1		PP		Ej ect
	2		2		I - II		Dual
	3		3		Tv/ DTV		TV/ R
	4		4		[ ≡ ]		Text
	5		5		[ ≡O ]		Opt i ons
	6		6		AV/ Sour ce		AV
	7		7		[ ≡+ ] / [ X ]		For mat
	8		8		[ ≡X ] / [ ■ ]		3D
	9		9		[ . ≡ ] / [ ■ ]		Subt



