 

 



 


 


 

 
 


 
 
 

 
 
 

 

 

 
 
 
 

 


 

 

 

 


 
 

 
 

 
 
 


 

 

 
 





 




Original		Rechange		Original		Rechange	
	Power		Power		P-		Ch -
	Source		AV		Vol+		Vol +
	1		1		Vol-		Vol -
	2		2		Menu		Menu
	3		3		Q.Menu		D. Menu
	4		4		Back		Back
	5		5		Exit		Exit
	6		6		OK		Ok
	7		7		Up		Up
	8		8		Down		Down
	9		9		Right		Right
	0		0		Left		Left
	TV		Smart		I/Info		Info
	Recall		Pre Ch		[≡]/Text		Text
	Mute		Mute		Guide		Guide
	Under Mute/No		Media		Music-Movie-Phot		TV/R
	P+		Ch +		*/O		Format





Original		Recharge		Original	Recharge
	* / 0 ..		3D		
	Lang		Dual		
	[...] ..		Subt		
	[-O-]		Shift + 3D		
	Pause		Pause		
	Rec		Rec		
	Stop		Stop		
	<<		<<		
	>>		>>		
	Play		Play		
	Red		Red		
	Green		Green		
	Yellow		Yellow		
	Blue		Blue		

