



Original		Rechange		Original		Rechange	
	Netflix		Media		Vol+		Vol +
	Power		Power		Vol-		Vol -
	Source		AV		P+		Ch +
	Mute		Mute		P-		Ch -
	1		1		OK		Ok
	2		2		Menu		Menu
	3		3		Back		Back
	4		4		Exit		Exit
	5		5		Q.Menu		D. Menu
	6		6		Right		Right
	7		7		Up		Up
	8		8		Down		Down
	9		9		Left		Left
	0		0		i		Info
	↔		Pre Ch		Lang		Dual
	[TV]		TV/R		Subt.		Subt
	Internet		Smart		TXT		Text





Original		Recharge		Original		Recharge	
	EPG		Guide				
	You Tube		Eject				
	*/Q		Format				
	[>]		Shift + Smart				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	Play		Play				
	Rec		Rec				
	Stop		Stop				
	<<		<<				
	Pause		Pause				
	>>		>>				
	[+]		3D				

