



 

 

 



 



















 

 









Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 Nicam/A2	 Shift + Audio / Lang I/II
 Aspect	 Shift + Picture / Format
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--	 Shift + Guide / EPG / -/--
 0	 0

Original	Rechange
 Recall	 Back / Return
 Display	 Display / Media
 Freeze	 Pause / Step / Freeze
 Rec/Auto	 Rec / Rec Mode
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Sleep	 Sleep / Timer
 Up	 Up
 Source	 AV / Input / RDS
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear





Original	Recharge	Original	Recharge
 CH+    CH	 CH+ / Page+    CH PAGE	 DTV	 Smart / List    LIST SMART
 Subtitle    SUBTITLE	 Subtitle / EQ    EQ SUBTITLE	 EPG	 Guide / EPG / -/-    -/- GUIDE EPG
 Vol+    VOL	 Vol+    VOL	 Tv/Radio    TV/RADIO	 TV/Radio /    PROGRAM TV/RADIO
 CH-    CH	 CH- / Page-    CH PAGE		
 T.Shift    T SHIFT	 Setup / OPT /    OPT-TOOLS SETUP		
 Vol-    VOL	 Vol-    VOL		
 Play/Pause/Hold    HOLD	 Play / Slow    SLOW		
 Play/Pause/Hold    HOLD	 Shift + Stop /    SHIFT + HOLD		
 <</Reveal    REVEAL	 << / Tune-    TUNE-		
 >>/Size    SIZE	 Zoom / Size    ZOOM		
 >>/Size    SIZE	 >> / Tune+    TUNE+		
 Stop/Index    INDEX	 Stop / Hold    HOLD		
 I<<    PRESET-	 I<< / Preset-    PRESET-		
 S.Page/>>I    S PAGE	 >>I / Preset+    PRESET+		
 Text    TEXT	 Text / Goto    GOTO TEXT		
 FAV	 Fav / Marker / PC    PC FAV MARKER		
 Audio    AUDIO	 Audio / Lang I/II    LANG I/II AUDIO		

