


 
 


 
 
 


 
 

 
 
 






 

 
 


 
 






Original	Rechange
 Power	 Power
 iPod	 Shift + 1
 Tv	 Shift + 2
 AUX	 Shift + 3
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 Enter	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Tuner	 Shift + 4
 Disc/USB/NET	 Shift + 5
 Red/Program	 Red
 Green/Marker	 Green
 Yelow/Digest	 Yellow

Original	Rechange
 Blue/Zoom	 Blue
 Sleep	 Sleep
 Timer	 AV
 Surround	 Dual
 Mute	 Mute
 Clear	 Exit
 Search	 TV/R
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0





Original	Rechange	Original	Rechange
 Option	 Options	 Vol+	 Vol +
 Top Menu	 Menu	 Vol-	 Vol -
 Open/Close	 Eject	 PIP	 Format
 Setup	 D. Menu	 Memory	 Rec
 Pop Up Menu	 List	 A-B	 Shift + Play
 Home	 Smart	 Status	 Info
 Return	 Back	 Dimmer	 Guide
 On Screen	 Shift + Options	 Shuffle	 Pre Ch
 Subtitle	 Subt	 Display	 Shift + Info
 Audio	 Shift + Text	 TP	 3D
 Repeat	 Text		
 >> Preset >	 >>		
  << < Preset	  <<		
 >> Tuning>>	 >>		
 << <<Tuning	 <<		
  >>	 Ch +		
 <<	 Ch -		

