




 



 







 

 







 

 

 

 













 




 








 

 

 



 



 




Original		Rechange		Original		Rechange	
	Power		Power		Vol+		Vol +
	Mute		Mute		Up		Up
	--		Guide		PR+		Ch +
	P<P		Pre Ch		PR-		Ch -
	I-II		Dual		Down		Down
	1		1		Right		Right
	PP		Eject		Left		Left
	2		2		M		Ok
	3		3		M		Menu
	4		4		[i]/Info		Info
	5		5		Red/Sound		Red
	6		6		Green/Picture		Green
	7		7		Yellow/Feature		Yellow
	8		8		Blue/Install		Blue
	9		9		TV		TV/R
	0		0		AV		AV
	Vol-		Vol -		[≡]/Text		Text





Original	Recharge	Original	Recharge
 [≡o]	 Options		
 [≡+]	 Subt		
 [≡x]	 Format		
 [.=]	 3D		
 [≡?]	 Exit		
 [≡i]	 Smart		
 [≡♦]	 Media		

