 




 
 
 
 
 
 
 

 
 

 

 



 
 
 
 

 


 

 

 
 



 



 


 
 



 


 

 









Original	Rechange	Original	Rechange
 Standby/on	 Power	 Vol-	 Vol -
 Sleep	 Sleep	 Sound	 Dual
 Tun/Band	 Media	 Bass	 Subt
 Timer/Clock	 Options	 1	 1
 Folder/Tuning Up	 Ch +	 2	 2
 Folder/Tuning	 Ch -	 3	 3
 FM Mode	 Red	 4	 4
 Stop	 Stop	 5	 5
 Play/Pause	 Pause	 6	 6
 Play/Pause CD	 Play	 7	 7
 Up/Preset >>I	 >>I	 8	 8
 Down/I<<	 I<<	 9	 9
 Tape/AUX	 Green	 0	 0
 Repeat	 Text	 +10	 Guide
 Random	 AV		
 Memory/Display	 Menu		
 Vol+	 Vol +		

