



Original		Rechange		Original		Rechange	
	Power		Power		Vol-		Vol -
	Source		AV		PR+		Ch +
	Tv/DTV		TV/R		PR-		Ch -
	1		1		Menu		Menu
	2		2		Exit		Exit
	3		3		Return		Back
	4		4		Tools		Options
	5		5		Red		Red
	6		6		Green		Green
	7		7		Yellow		Yellow
	8		8		Blue		Blue
	9		9		[≡]/Text		Text
	0		0		Ch.List		List
	PRE-CH		Pre Ch		Subt.		Subt
	-/--		Shift + Guide		P.Size		Format
	Mute		Mute		Guide		Guide
	Vol+		Vol +		Enter		Ok



