

 



 


 

 



 



 
 
 



 
 


 
 

 
 

 



 





Original	Rechange
 Power	 Power
 Open/Close	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Prog	 Sleep
 Clear	 Exit
 Step	 Guide
 Instant Replay	 Format
 Instant Skip	 3D

Original	Rechange
 I<</<<	 I<<
 Stop	 Stop
 Play	 Play
 Pause	 Pause
 >>I/>>	 >>I
 Return	 Back
 [II]/Menu	 Menu
 Info	 Info
 Disc Menu	 D. Menu
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 A-B/Repeat	 AV
 EZ View	 Smart
 Subtitle	 Subt





	Original	Recharge	Original	Recharge
<input type="checkbox"/>	AUDIO	<input type="checkbox"/>		Dual
<input type="checkbox"/>	ANGLE	<input type="checkbox"/>		Options
<input type="checkbox"/>	REPEAT	<input type="checkbox"/>		Text

