 


 




 



 
 
 
 




 


 


 
 

 
 
 
 

 
 
 


 

 
 
 
 


 
 


 
 



 


 




 


 




Original		Recharge		Original		Recharge	
	Power		Power		i		Info
	1		1		Up		Up
	2		2		Down		Down
	3		3		Right		Right
	4		4		Left		Left
	5		5		Menu		Menu
	6		6		Q.Menu		D. Menu
	7		7		Exit		Exit
	8		8		Recall		Pre Ch
	9		9		Back		Back
	TV		TV/R		Red		Red
	0		0		Green		Green
	Vol+		Vol +		Yellow		Yellow
	Vol-		Vol -		Blue		Blue
	PR+		Ch +		World		Guide
	PR-		Ch -		Music/Movie/Phot		Options
	Mute		Mute		Guide Tv		Shift + Options





Original		Recharge		Original		Recharge	
	* / o		Sleep				
	Games		Eject				
	[≡]/Text		Text				
	Netflix		Media				
	Lang		Dual				
	[-O-]		List				
	[≡].		Subt				
	Rec		Rec				
	Play		Play				
	OK		Ok				
	Stop		Stop				
	Pause		Pause				
	>>		>>				
	<<		<<				

