 





Original	Rechange
 Source	 AV / Input / RDS
 Power	 Power
 Theatre	 TV/Radio /
 <</<	 << / Tune-
 Play	 Play / Slow
 >>/ >	 >> / Tune+
 Sync Menu	 D.Menu / Top
 <<	 << / Preset-
 Stop	 Stop / Hold
 >>	 >> / Preset+
 ?/i-Manual	 Shift + Info / Angle
 Scene	 Picture / Format
 [+]	 Smart / List
 Digital/Analog	 Display / Media
 ♥	 Fav / Marker / PC
 Guide	 Guide / EPG / -/--
 Up	 Up

Original	Rechange
 [i+]/[?]	 Info / Angle
 Left	 Left
 OK	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down
 Options	 Setup / OPT /
 Home	 Menu / Home
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5





Original		Rechange		Original		Rechange	
	6		6				
	7		7				
	8		8				
	9		9				
	[≡]/Text		Text / Goto				
	0		0				
	[...]		Subtitle / EQ				
	Vol+		Vol+				
	PR+		CH+ / Page+				
	Mute		Mute / Dimmer				
	Audio		Audio / Lang I/II				
	Vol-		Vol-				
	PR-		CH- / Page-				

